Turn Signal Switch

Wiring Diagram

For Internal Indicator Lamp:
Switch housing must be grounded by contact with metal steering column

Front right

Rear right

②

①

④

③

⑤

⑦

⑥

15 AMP Fuse

To Headlamp Switch for Parking lights

Battery

+

P

L

3 Terminal Flasher

To Headlamp Switch for Tail lights

Battery

Brake Light Switch

Front left

Rear left
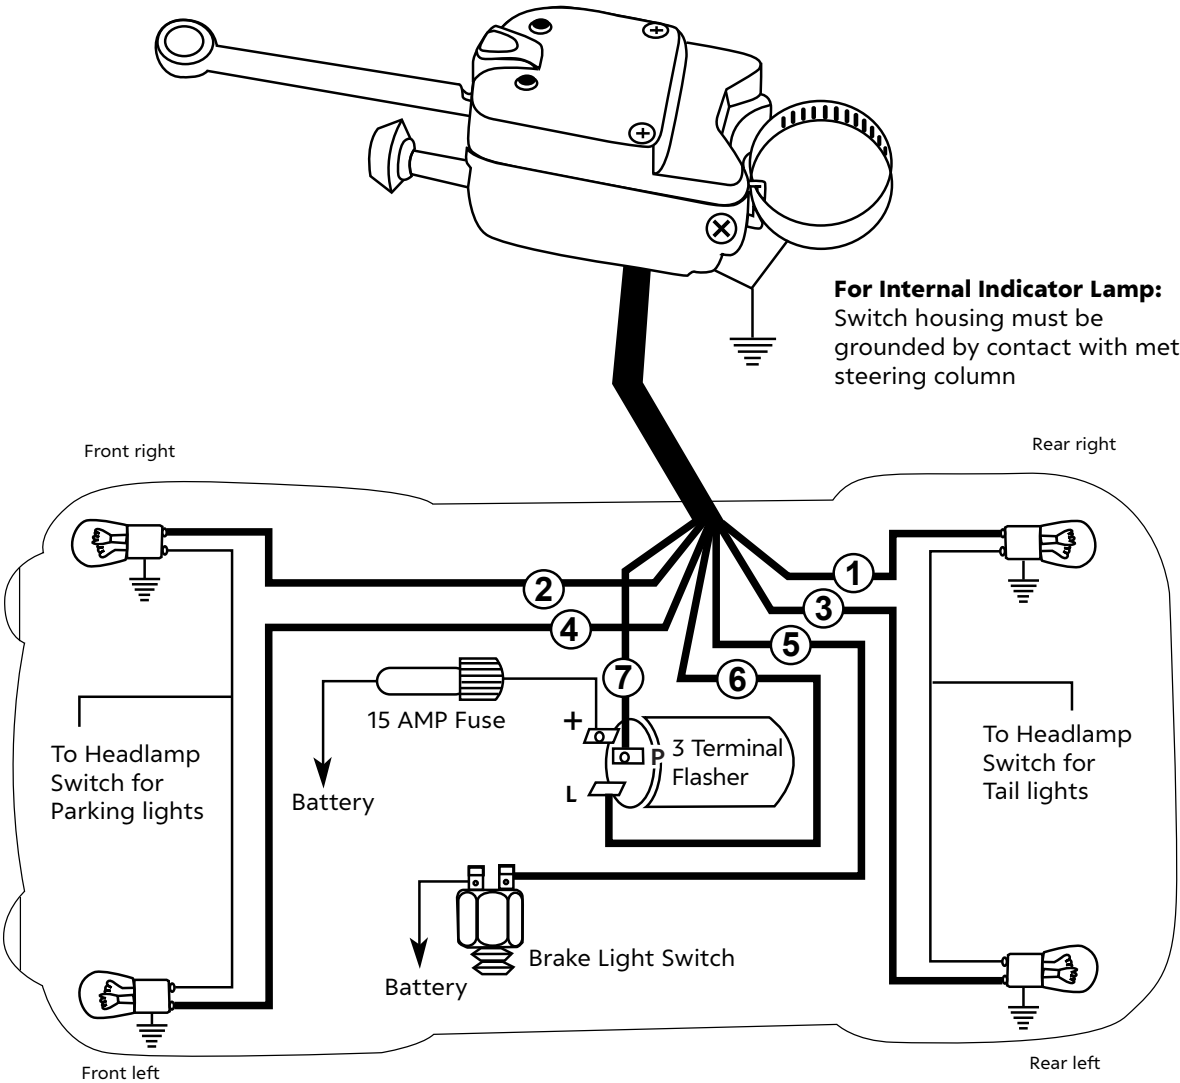
Brown	**1**	Right rear flasher lamp
Green	**2**	Right front flasher lamp
Orange	**3**	Left rear flasher lamp
Yellow	**4**	Left front flasher lamp

Red	**5**	Stop switch
Black	**6**	Flasher L terminal
Blue	**7**	Flasher P terminal (For indicator lamp inside switch)
⏚	=	Negative ground on car body

092519 V2